

 

 









 



 
 
 
 


Távirányító segédlet

Varga András Távirányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	AKAI AX-2601WHD							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	TV/AV							
TEXT	TV/Text							
TV	System							
	Timer							
	T_Subpage							
	T_Size							
	T_Mix							
	T_Cancel	Null						
	T_Reveal							
	T_Hold							
	T_Index							
	Red							
	Green							
	Yellow							
	Blue							
	Sound	Nicam/A2						
								
	Picture							
								
OK	Enter							
								
MENU	Sys Menu							
								
EXIT	Sys Exit							
VOL+	Vol+							
	Display							
CH+	CH+							
VOL-	Vol-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	PR/--							
0/10	0							
	Return							