

Távírányító segédlet

Varga András IR-99 BT (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	DIMARSON DM-LT40FHD-SM							
	Direct		Direct		Direct		Direct	
POW	Power							
AV	Input							
MUTE	Mute							
APPS	Rec							
AUDIO	S.Mode							
PICT	P.Mode							
I+	Disp./Info							
RWD	Rew							
FWD	Fwd							
FIRST	Prev							
LAST	Next							
TEXT	Text							
PLAY/PAUSE	Play/Pause/T.							
STOP	Stop							
TV	TV/Radio							
TIMER	Sleep							
SUBT.	Subtitle							
EXPAND	T-Size							
BACK	Prev Pr.							
UPDATE	T-Subpage							
REVEAL	T-Reveal							
TXT STOP	T-Hold							
INFO	T-Index							
RED	R							
GREEN	G/Goto							
YELLOW	Y/Repeat							
BLUE	B/A-B							
HOME	Home/Rec.M.							
UP	C.Up							
SETUP	Epg							
LEFT	C.Left							
OK	OK							
RIGHT	C.Right							
MENU	Menu							
DOWN	C.Down							
EXIT	Exit							
VOL+	Volume+							
NETFLIX	Media							
CH+/P+	CH+							
VOL-	Volume-							
YOUTUBE	Aspect							
CH-/P-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
1. -/--	-/--							
0/10	0							
2.P/C	I/II/Audio							