

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Open						
AV	Input							
TEXT	Title	Program						
TV	Pal/Ntsc							
	Sleep	Time						
	Subtitle							
	Zoom	Angle						
	Repeat	A-B						
	Clear							
	Step/Slow							
	Stop							
	Pause							
								
	Rev/Tun-							
	Play							
	Fwd/Tun+							
	Audio	Sound						
								
	Setup	Setup						
								
OK	Enter	Enter						
								
MENU	Menu	Menu						
								
EXIT	Return	Return						
VOL+	Volume+	Volume+						
	Info	DVD Disp						
CH+	Next/Prese							
VOL-	Volume-	Volume-						
MUTE	Mute	ST/Mono						
CH-	Prev/Preset							
1	1	DVD						
2	2	FM						
3	3							
4	4							
5	5							
6	6							
7	7	Memory						
8	8	Name						
9	9	Dimmer						
		Amp						
0/10	0							
	Mark							