

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Standby	Open/Close						
AV	Input	DVD						
TEXT	Program	Title						
TV	PAL/NT	FM						
	Sleep							
	Subtitle							
	Zoom	Angle						
	Return	Repeat						
	Clear							
	Step/Slow	A-B						
	Stop							
	Info							
								
	Rev/Tun-							
	Play/Pause							
	Fwd/Tun+							
	Audio							
								
	Setup							
								
OK	Enter	Memory						
								
MENU	Menu							
								
EXIT								
VOL+	Volume+							
	Display							
CH+	Preset+/Ne							
VOL-	Volume-							
MUTE	Mute	ST/MO						
CH-	Preset-/Pre							
1	1	Prologic II						
2	2	EQ						
3	3	Surround						
4	4	Name						
5	5	Mark						
6	6	Digest						
7	7							
8	8							
9	9							
								
0/10	0							
	Goto							