

## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Eject						
AV	AV	Scart						
TEXT	Prog							
TV	TV	DVD						
	Timer							
	Subtitle							
	Zoom	Angle						
	Return	A-B Repeat						
	Slow	Clear						
	Step							
	Stop							
	PAL/NTSC							
	Rec	Rec.Mode						
	Rev							
	Play/Pause							
	Fwd							
	Audio							
								
	Setup							
								
OK	Enter							
								
MENU	Menu							
								
EXIT	Edit							
VOL+								
	OSD							
CH+	Next							
VOL-								
MUTE	Mute							
CH-	Prev							
1	1	Erase						
2	2	Finalize						
3	3	Pro Disc						
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	Goto							