

## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	AKAI DV-R3110							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Open/Close						
AV	Band	FM Mode						
TEXT								
TV	Function	Memory						
	Subtitle							
	Zoom	Angle						
	Slow-	Clear						
	Slow+							
	Stop							
	Pause							
	Rev/Tun-							
	Play							
	Fwd/Tun+							
	Audio	Sound						
	Setup							
OK	Enter							
MENU	Menu							
EXIT	Return							
VOL+	Volume+							
	Display							
CH+	Next							
VOL-	Volume-							
MUTE								
CH-	Prev							
1	1	5.1CH						
2	2	2.1CH						
3	3	Prologic						
4	4							
5	5							
6	6							
7	7							
8	8							
9	9	Dimmer						
	+10							
0/10	0							
	Goto							