

 

 









 



 
 
 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	USB							
TEXT	Text							
TV	TV/R							
								
	Sub-T							
								
								
	EPG	Prev						
		Next						
		Stop						
		Play/Pause						
	Red	Rec						
	Green	Rev						
	Yellow	Play/Pause						
	Blue	Fwd						
	Audio							
								
								
								
OK	OK							
								
MENU	Menu							
								
EXIT	Exit							
VOL+	Vol+							
	Info							
CH+	CH+							
VOL-	Vol-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	Last							
0/10	0							
	Favorit							