




 





 








 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Open						
AV								
TEXT	Prog	Title						
TV	USB/Card	N/P						
								
	Subtitle	PBC						
	Zoom	Angle						
	Return	Repeat						
	Slow	Clear						
	Step	A-B						
	Stop							
	Pause							
								
	Rev							
	Play							
	Fwd							
	Language							
								
	Setup	V-Mode						
								
OK	Enter							
								
MENU	Menu							
								
EXIT								
VOL+	Volume+							
	OSD							
CH+	Next							
VOL-	Volume-							
MUTE	Mute	L/R						
CH-	Prev							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	10+							
0/10	0/10							
		Goto						