 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Open						
AV	Source							
TEXT	Title							
TV	TV/DVD	Watch TV						
	Timer							
	Subtitle							
	Zoom	Angle						
	Repeat	A-B						
	Clear							
	Ins.Chapter							
	Stop							
	Play/Pause							
	Record	Rec.Mode						
	Search-	Skip-						
	Play/Pause	Play Mode						
	Search+	Skip+						
	Audio							
								
	Setup							
								
OK	Select							
								
MENU	Menu							
								
EXIT	Return							
VOL+								
	Display							
CH+	Program+							
VOL-								
MUTE								
CH-	Program-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	+10							
0/10	0							
	Srch.Mode							