

Távirányító segédlet

Távirányító Specialista Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Billentyűzet	TV		DVD/VCR		SAT		AUX	
	DIMARSON ED20DF-21G							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
POW	Power	Power						
AV	Input	Media						
TEXT	Text							
TV	TV/Radio							
TIMER	Sleep	T.Shift						
SUBT.	Subtitle	Subtitle						
EXPAND	T-Size							
BACK	Prev Pr.	Repeat						
UPDATE	T-Subpage	A-B						
REVRREAL	T-Reveal							
TXT STOP	T-Hold	Stop						
INFO	T-Index	Freeze						
RED	Red/Youtube	Rec						
GREEN	Green/Netflix	Rev						
YELLOW	Yellow/Rep.	Play/Pause						
BLUE	Blue/A-B	Fwd						
AUDIO	S.Mode	Audio I/II						
UP	C.Up	C.Up						
PICT	P.Mode	Aspect						
LEFT	C.Left	C.Left						
OK	OK	OK						
RIGHT	C.Right	C.Right						
MENU	Menu	Home/Rec.M.						
DOWN	C.Down	C.Down						
EXIT	Exit	Exit						
VOL+	Volume+	Volume+						
I+	Display	Info						
CH+	CH+	Next						
VOL-	Volume-	Volume-						
MUTE	Mute	Mute						
CH-	CH-	Prev						
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
-/--	-/--	Fav-						
0/10	0	Fav						
P/C	Epg	Fav+						