

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Power TV						
AV	Input	AV						
TEXT	Prog/Check							
TV	Dir.TV Rec							
	Timer	Time Slip						
								
								
								
	Search-	Frame-						
	Search+	Frame+						
	Stop							
	Pause							
	Rec	Rec Mode						
	Skip-							
	Play/x1.3							
	Skip+							
	Audio							
								
	Functions	Functions						
								
OK	Enter	Enter						
								
MENU	Menu/P.Lis	Top Menu						
								
EXIT	Return	Return						
VOL+	Volume+							
	Display							
CH+	CH+							
VOL-	Volume-							
MUTE								
CH-	CH-							
1	1	Manual						
2	2	F Rec						
3	3	Status						
4	4	AV Link						
5	5	Erase						
6	6	Pos.Memor						
7	7	Marker						
8	8	ShowView						
9	9							
	-/--							
0/10	0							
	Cancel							