

## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	AV System						
AV	TV/AV							
TEXT	TUNER/Ba	VCR/AUX						
TV	DVD/CD	TV						
	Sleep							
								
	Zoom							
	Repeat							
	Skip-/CH-							
	Skip+/CH+							
	Stop							
	Pause							
								
	Slow/Searc							
	Play	Play Mode						
	Slow/Searc							
	Audio							
								
	Setup							
								
OK	Enter	Pos.Memor						
								
MENU	Menu	Top menu						
								
EXIT	Return							
VOL+	Vol+							
	Display	FL						
CH+	Skip+/CH+							
VOL-	Vol-							
MUTE	Muting							
CH-	Skip-/CH-							
1	1	Subwoofer						
2	2	SFC						
3	3	Super						
4	4	PL II						
5	5							
6	6	C.S.M.						
7	7	Group						
8	8							
9	9							
	>10	CH						
0/10	0	C.Focus						
	Cancel							