



 


 





 



 
 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	AV	SD						
TEXT	Text							
TV	TV	Direct TV						
								
	Aspect							
								
	F.P.							
	T_Hold							
	T_Index							
	Red							
	Green							
	Yellow							
	Blue							
	Stereo							
								
								
								
OK	OK							
								
MENU	Menu							
								
EXIT	Exit	N						
VOL+	Volume+							
	Info							
CH+	CH+							
VOL-	Volume-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2	Multi						
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	Channel							