

Távirányító segédlet

Varga András Távirányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	PANASONIC EUR7720X30 DVD		PANASONIC EUR7720X30 VHS					
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power		Power					
AV	AV Enh.		Input	AV Link				
TEXT			Prog/Check					
TV	VHS/DVD		VHS/DVD	Ext Link				
			Timer	Off Timer				
			i-Timer					
	Zoom							
	Repeat	Q.Replay	Repeat					
	Cancel/Res	Group	Cancel/Res					
	P.Memory		Rec Check					
	Stop		Stop					
	Slow		Pause/Slo					
			Rec	Rec Mode				
	Search-		Rew	Index-				
	Play	Play Mode	Play	Prog Play				
	Search+		Fwd	Index+				
	Audio		Audio					
	▲		▲					
	Setup		Mus.With					
	◀		◀	Jet Rew				
OK	Enter		Enter					
	▶		▶					
MENU	Menu	Top Menu	Menu					
	▼		▼					
EXIT	Return		Exit					
VOL+								
	Display		Display					
CH+	Next		CH+					
VOL-								
MUTE	Dubbing		Dubbing					
CH-	Prev		CH-					
1	1		1					
2	2		2					
3	3		3					
4	4		4					
5	5		5					
6	6		6					
7	7		7					
8	8		8					
9	9		9					
	>10		-/--					
0/10	0		0					