

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	AV System						
AV		TV/AV						
TEXT								
TV	TV							
	Sleep							
	Subtitle							
	Zoom							
	Repeat	Q.Replay						
	Skip-							
	Skip+	Man.Skip						
	Stop							
	Pause	Play Mode						
		Vcr						
	Slow/searc	Tuner/Band						
	Play	Dvd/CD						
	Slow/searc	Aux						
	Audio	H.Bass						
								
	Setup							
								
OK	Enter	Quick Osd						
								
MENU	Menu	Top menu						
								
EXIT	Return							
VOL+	Volume+							
	Functions	FL display						
CH+	CH+							
VOL-	Volume-							
MUTE	Muting							
CH-	CH-							
1	1	Subwoofer						
2	2	SFC						
3	3	Super Srnd						
4	4	PL II						
5	5	Mix 2CH						
6	6	Play Speed						
7	7	Group						
8	8	Angle/Page						
9	9	Test						
	>10	CH Select						
0/10	0	C.Focus						
	Cancel	Adv.D.Rev.						