





 













 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	GABA GABA-03							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	AV/TV							
TEXT	Text							
TV	P.P							
	Clock							
								
	Zoom							
	Prev							
	Lock							
	Reveal							
	Hold							
	Mix							
	Red/Pic							
	Green/Cloc							
	Yellow/Tim							
	Blue/Sound							
	Sound							
	P+							
	Pic							
	V-							
OK								
	V+							
MENU	Menu							
	P-							
EXIT								
VOL+	V+							
	Call							
CH+	P+							
VOL-	V-							
MUTE	Mute							
CH-	P-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	Prev							