




 





 








 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	GABA GABA-09							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Input							
TEXT	Pip							
TV	Size							
	Sleep							
	9.Win							
								
	Prev							
								
								
								
	Still							
								
								
								
								
	S.Mode							
	CH+							
	P.Mode							
	Vol-							
OK								
	Vol+							
MENU	Menu							
	CH-							
EXIT	Exit							
VOL+	Vol+							
	Disp							
CH+	CH+							
VOL-	Vol-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	Prev							