

## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	GABA GLV-3210						GABA GLV-3210 USB	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Power					Power	
AV	Source	Source					Source	
TEXT	Text						Text	
TV	DTV/ATV	DTV/Radio					DTV/ATV	
	Sleep						Sleep	
	Subtitle						Subtitle	
	MTS						MTS	
	TV Prev						TV Prev	
	EPG	Rec Menu					Rec Menu	
	T.Shift							
	Still	Stop					Stop	
	List	Play/Pause					Play/Pause	
	Red	Rec					Rec	
	Green	Rev					Rev	
	Yellow	Play/Pause					Play/Pause	
	Blue	Fwd					Fwd	
	S.Mode							
	▲	▲					▲	
	P.Mode	Aspect					Aspect	
	◀	◀					◀	
OK	Enter	Enter					Enter	
	▶	▶					▶	
MENU	Menu	Menu					Menu	
	▼	▼					▼	
EXIT	Exit	Exit					Exit	
VOL+	Volume+						Volume+	
	i						i	
CH+	P+	Next					Next	
VOL-	Volume-						Volume-	
MUTE	Mute						Mute	
CH-	P-	Prev					Prev	
1	1						1	
2	2						2	
3	3						3	
4	4						4	
5	5						5	
6	6						6	
7	7						7	
8	8						8	
9	9						9	
	-/--						-/--	
0/10	0						0	
	Fav						Fav	