

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

| Layout Keys | TV | | VCR/DVD | | SAT | | AUX | |
|----------------|------------------|------------|---------|-------|--------|-------|----------------------|-------|
| | GABA GLV-4200 | | | | | | GABA GLV-4200 USB | |
| | Direct | Shift | Direct | Shift | Direct | Shift | Direct | Shift |
| | Power | Power | | | | | Power | |
| AV | Source | Source | | | | | Source | |
| TEXT | Text | | | | | | Text | |
| TV | DTV/ATV | DTV/Radio | | | | | DTV/ATV | |
| | Sleep | | | | | | Sleep | |
| | Subtitle | | | | | | Subtitle | |
| | MTS | | | | | | MTS | |
| | TV Prev | | | | | | TV Prev | |
| | EPG | Rec Menu | | | | | Rec Menu | |
| | T.Shift | | | | | | | |
| | Still | Stop | | | | | Stop | |
| | List | Play/Pause | | | | | Play/Pause | |
| | Red | Rec | | | | | Rec | |
| | Green | Rev | | | | | Rev | |
| | Yellow | Play/Pause | | | | | Play/Pause | |
| | Blue | Fwd | | | | | Fwd | |
| | S.Mode | | | | | | | |
| | | | | | | | | |
| | P.Mode | Aspect | | | | | Aspect | |
| | | | | | | | | |
| OK | Enter | Enter | | | | | Enter | |
| | | | | | | | | |
| MENU | Menu | Menu | | | | | Menu | |
| | | | | | | | | |
| EXIT | Exit | Exit | | | | | Exit | |
| VOL+ | Volume+ | | | | | | Volume+ | |
| | i | | | | | | i | |
| CH+ | P+ | Next | | | | | Next | |
| VOL- | Volume- | | | | | | Volume- | |
| MUTE | Mute | | | | | | Mute | |
| CH- | P- | Prev | | | | | Prev | |
| 1 | 1 | | | | | | 1 | |
| 2 | 2 | | | | | | 2 | |
| 3 | 3 | | | | | | 3 | |
| 4 | 4 | | | | | | 4 | |
| 5 | 5 | | | | | | 5 | |
| 6 | 6 | | | | | | 6 | |
| 7 | 7 | | | | | | 7 | |
| 8 | 8 | | | | | | 8 | |
| 9 | 9 | | | | | | 9 | |
| | -/-- | | | | | | -/-- | |
| 0/10 | 0 | | | | | | 0 | |
| | Fav | | | | | | Fav | |