




 





 








 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	ALCOR HD-1500 Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV								
TEXT	Text							
TV	TV/R							
								
	Sub							
	PVR							
	Swap							
	Prev							
	Next							
	Stop							
	Play/pause							
	Rec	Red						
	Rev	Green						
	Play/pause	Yellow						
	Fwd	Blue						
	Audio							
								
	Pic	Aspect						
								
OK	OK	OK						
								
MENU	Menu	Menu						
								
EXIT	Exit							
VOL+	Vol+							
	i	Res						
CH+	CH+	PgUp						
VOL-	Vol-							
MUTE	Mute							
CH-	CH-	PgDwn						
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	EPG							
0/10	0							
	Fav							