

 

 








 



 
 
 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

| Layout Keys | TV | | VCR/DVD | | SAT | | AUX | |
|---|-----------------|----------|---------|-------|--------|-------|--------|-------|
| | Direct | Shift | Direct | Shift | Direct | Shift | Direct | Shift |
| | ORION HT500A v1 | | | | | | | |
|  | Power | Open | | | | | | |
| AV | AM/FM | | | | | | | |
| TEXT | Prog | Title | | | | | | |
| TV | DVD/Radio | N/P | | | | | | |
|  | | | | | | | | |
|  | Subtitle | | | | | | | |
|  | Zoom | Angle | | | | | | |
|  | Repeat | | | | | | | |
|  | Slow | | | | | | | |
|  | Step | A-B | | | | | | |
|  | Stop | | | | | | | |
|  | Play/Pause | | | | | | | |
|  | | | | | | | | |
|  | Rev | | | | | | | |
|  | Play/Pause | | | | | | | |
|  | Fwd | | | | | | | |
|  | Audio | Prologic | | | | | | |
|  | | | | | | | | |
|  | Setup | | | | | | | |
|  | | | | | | | | |
| OK | Enter | | | | | | | |
|  | | | | | | | | |
| MENU | Menu/Auto | PBC | | | | | | |
|  | | | | | | | | |
| EXIT | Return | V-Mode | | | | | | |
| VOL+ | Volume+ | | | | | | | |
|  | OSD | | | | | | | |
| CH+ | Next | | | | | | | |
| VOL- | Volume- | | | | | | | |
| MUTE | Mute | L/R | | | | | | |
| CH- | Prev | | | | | | | |
| 1 | 1 | | | | | | | |
| 2 | 2 | | | | | | | |
| 3 | 3 | | | | | | | |
| 4 | 4 | | | | | | | |
| 5 | 5 | | | | | | | |
| 6 | 6 | | | | | | | |
| 7 | 7 | | | | | | | |
| 8 | 8 | | | | | | | |
| 9 | 9 | | | | | | | |
|  | 10+ | | | | | | | |
| 0/10 | 0/10 | | | | | | | |
|  | Goto | | | | | | | |