





 




 











 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
								
AV								
TEXT								
TV								
								
								
								
								
								
								
								
 Red	Reset							
 Green	Prev							
 Yellow	Play/Pause							
 Blue	Next							
	EQ							
								
								
								
OK	Mode							
								
MENU	Mode							
								
EXIT								
VOL+	Volume+							
								
CH+	FM+							
VOL-	Volume-							
MUTE	Mute							
CH-	FM-							
1	Front-							
2	Front+							
3								
4	Cen-							
5	Cen+							
6								
7	Rear-							
8	Rear+							
9								
 1.								
0/10								
 2.	Fav/PC							