

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

| Layout Keys | TV | | VCR/DVD | | SAT | | AUX | |
|----------------|-------------------------|------------|--------------------------|-------|--------|-------|--------|-------|
| | AKAI LET32FHD3283 TV | | AKAI LET32FHD3283 DVD | | | | | |
| | Direct | Shift | Direct | Shift | Direct | Shift | Direct | Shift |
| | Standby | | Standby | Eject | | | | |
| AV | Input | | Input | | | | | |
| TEXT | Text | | Title | Prog | | | | |
| TV | TV/Radio | Media | Intro | | | | | |
| | Sleep | Time Shift | | | | | | |
| | Subtitle | | Subtitle | | | | | |
| | T_Size | | Zoom | Angle | | | | |
| | Prev Pr. | | Repeat | A-B | | | | |
| | Subpage | | | | | | | |
| | T_Reveal | | Slow | | | | | |
| | T_Hold | | Stop | | | | | |
| | T_Index | | Play/Pause | | | | | |
| | Red | | Record | | | | | |
| | Green | | Rev | | | | | |
| | Yellow | | Play/Pause | | | | | |
| | Blue | | Fwd | | | | | |
| | S.Mode | Audio | Language | | | | | |
| | ▲ | | ▲ | | | | | |
| | P.Mode | Aspect | Setup | | | | | |
| | ◀ | | ◀ | | | | | |
| OK | OK | | OK | | | | | |
| | ▶ | | ▶ | | | | | |
| MENU | LCD Menu | | Menu | | | | | |
| | ▼ | | ▼ | | | | | |
| EXIT | Exit | | | | | | | |
| VOL+ | Vol+ | | Vol+ | | | | | |
| | Display | | Display | | | | | |
| CH+ | CH+ | Fav+ | Next | | | | | |
| VOL- | Vol- | | Vol- | | | | | |
| MUTE | Mute | | Mute | | | | | |
| CH- | CH- | Fav- | Prev | | | | | |
| 1 | 1 | | 1 | | | | | |
| 2 | 2 | | 2 | | | | | |
| 3 | 3 | | 3 | | | | | |
| 4 | 4 | | 4 | | | | | |
| 5 | 5 | | 5 | | | | | |
| 6 | 6 | | 6 | | | | | |
| 7 | 7 | | 7 | | | | | |
| 8 | 8 | | 8 | | | | | |
| 9 | 9 | | 9 | | | | | |
| | -/-- | Guide | -/-- | | | | | |
| 0/10 | 0 | | 0 | | | | | |
| | Fav | Auto | Goto | | | | | |