

 

 









 



 
 
 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Source							
TEXT	Text	TV/HMR						
TV	TV System	DTV						
	TimeShift	Timer Rec						
	Subtitle	Edit						
	Zoom							
	Repeat	A-B						
	Prev							
	Next							
	Stop							
	Pause							
	Rec	Red						
	Rev	Green						
	Play	Yellow						
	Fwd	Blue						
	Audio							
								
								
								
OK	Enter							
								
MENU	Home							
								
EXIT	Return							
VOL+	Favor/Vol+							
	Display							
CH+	Skip+							
VOL-	Load/Vol-							
MUTE	Mute							
CH-	Skip-							
1	1	HDD						
2	2	USB						
3	3	LAN						
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	Epg							
0/10	0							
	Goto							