

 

 









 



 
 
 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Eject						
AV	Video							
TEXT	Prog	Title						
TV	P/N							
								
	Subtitle							
	Zoom	Angle						
	Repeat	A-B						
	Clear							
	Slow							
	Stop							
	Pause							
								
	Rev							
	Play							
	Fwd							
	Language							
								
	Setup							
								
OK	Enter							
								
MENU	Menu/Pbc							
								
EXIT								
VOL+	Volume+							
	Display							
CH+	Next							
VOL-	Volume-							
MUTE	Mute	L/R						
CH-	Prev							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	10+							
0/10	10							
	Goto							