




 





 








 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Open/Close						
AV	USB							
TEXT	Prog	Title						
TV	N/P							
								
	Subtitle							
	Zoom	Angle						
	Repeat	A-B						
	Slow							
	Step							
	Stop							
	Play/Pause							
								
	Rev							
	Play/Pause							
	Fwd							
	Audio	A-Mode						
								
	Setup	V-Mode						
								
OK	Enter							
								
MENU	Menu							
								
EXIT	Ripping							
VOL+	Volume+							
	OSD							
CH+	Next							
VOL-	Volume-							
MUTE	Mute	L/R/ST						
CH-	Prev							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	10+							
0/10	0/10							
	Goto							