

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	AUX							
TEXT	Program	Title In						
TV		Dimmer						
	Sleep	Clock/Time						
								
	Repeat							
	Album-							
	Album+							
	Stop/Clear							
	Play/Pause							
	Play/Rec.Ti							
	Dwn/Rev							
	Play/Pause	Play.Mode						
	Up/Fwd							
	Sound	Surround						
								
	Play List							
	Vol-							
OK	Enter							
	Vol+							
MENU								
								
EXIT	Return							
VOL+	Vol+							
	Display							
CH+	Up/FF							
VOL-	Vol-							
MUTE	Muting							
CH-	Dwn/Rev							
1	1	CD						
2	2	Tape						
3	3	Tuner						
4	4	Sound EQ						
5	5	Re-Master						
6	6	Intro						
7	7	Marker						
8	8	Titl.Search						
9	9							
	Del							
0/10	0							
	>10							