

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Inp.Select							
TEXT	Text							
TV	Drive Sel.	Dir.TV Rec						
	Time Slip	Show View						
								
	STTL							
	Return							
	Rec.Mode							
	Ext Link							
	Stop							
	Pause	Prog/Check						
	Rec	Red/Audio						
	Slow/Searc	Green						
	Play/x1.3	Yellow/Cre						
	Slow/Searc	Blue/Manu						
	Audio							
								
	Dir.Navigat							
								
OK	OK							
								
MENU	Func.Menu	Option						
								
EXIT	Exit							
VOL+								
	i	Display						
CH+	CH+	Skip+						
VOL-								
MUTE								
CH-	CH-	Skip-						
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	Delete*							
0/10	0							
	Guide							