

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Inp.Select							
TEXT	Prog/Check							
TV	Drive Sel.	Dir.TV Rec						
	Time Slip	Show View						
	Status							
								
	Return							
	Rec.Mode							
	Ext Link							
	Stop							
	Pause							
	Rec	Red						
	Slow/Searc	Green/Cha						
	Play/x1.3	Yellow/-10s						
	Slow/Searc	Blue/+60s						
	Audio							
								
	Dir.Navigat							
								
OK	OK							
								
MENU	Func.Menu	Option						
								
EXIT	Exit							
VOL+								
	i	Display						
CH+	CH+	Skip+						
VOL-								
MUTE								
CH-	CH-	Skip-						
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	Delete*							
0/10	0							
	Guide							