






## Távirányító segédlet

Varga András Távirányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	EXT-In							
TEXT	TUNER/Ba							
TV	DVD							
	Sleep/Setu							
	CH Select							
	H.bass/C.fo							
								
	SFC							
	Stop							
	Pause							
								
	Slow/Search							
	Play	Play Mode						
	Slow/Search							
	SubW.Level	PL II						
								
	Functions							
								
OK	Enter							
								
MENU	Menu	Top Menu						
								
EXIT	Return							
VOL+	Vol+							
	FL Disp.							
CH+	Next/Up							
VOL-	Vol-							
MUTE	Muting							
CH-	Prev/Down							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	>10							
0/10	0							
	Cancel							