
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

| Layout Keys | TV | | VCR/DVD | | SAT | | AUX | |
|---|-------------|-----------|---------|-------|--------|-------|--------|-------|
| | Direct | Shift | Direct | Shift | Direct | Shift | Direct | Shift |
|  | Power | | | | | | | |
| AV | EXT-In | | | | | | | |
| TEXT | TUNER/Ba | | | | | | | |
| TV | DVD | | | | | | | |
|  | Sleep/Setu | | | | | | | |
|  | CH Select | | | | | | | |
|  | H.bass/C.fo | | | | | | | |
|  | | | | | | | | |
|  | SFC | | | | | | | |
|  | Stop | | | | | | | |
|  | Pause | | | | | | | |
|  | | | | | | | | |
|  | Slow/Search | | | | | | | |
|  | Play | Play Mode | | | | | | |
|  | Slow/Search | | | | | | | |
|  | SubW.Level | PL II | | | | | | |
|  | | | | | | | | |
|  | Functions | | | | | | | |
|  | | | | | | | | |
| OK | Enter | | | | | | | |
|  | | | | | | | | |
| MENU | Menu | Top Menu | | | | | | |
|  | | | | | | | | |
| EXIT | Return | | | | | | | |
| VOL+ | Vol+ | | | | | | | |
|  | FL Disp. | | | | | | | |
| CH+ | Next/Up | | | | | | | |
| VOL- | Vol- | | | | | | | |
| MUTE | Muting | | | | | | | |
| CH- | Prev/Down | | | | | | | |
| 1 | 1 | | | | | | | |
| 2 | 2 | | | | | | | |
| 3 | 3 | | | | | | | |
| 4 | 4 | | | | | | | |
| 5 | 5 | | | | | | | |
| 6 | 6 | | | | | | | |
| 7 | 7 | | | | | | | |
| 8 | 8 | | | | | | | |
| 9 | 9 | | | | | | | |
|  | >10 | | | | | | | |
| 0/10 | 0 | | | | | | | |
|  | Cancel | | | | | | | |