

 

 


 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

| Layout Keys | TV | | VCR/DVD | | SAT | | AUX | |
|---|---|------------|---------|-------|--------|-------|--------|-------|
| | ORION ORION-07 | | | | | | | |
| | Direct | Shift | Direct | Shift | Direct | Shift | Direct | Shift |
|  | Power | | | | | | | |
| AV | Input | | | | | | | |
| TEXT | Text | Lang | | | | | | |
| TV | TV/Radio | Auto | | | | | | |
|  | Sleep | T.Shift | | | | | | |
|  | Subtitle | | | | | | | |
|  | T_Size | | | | | | | |
|  | Prev Pr. | Repeat | | | | | | |
|  | T_Subpage | | | | | | | |
|  | T_Reveal | | | | | | | |
|  | T_Hold | Stop | | | | | | |
|  | T_Index | Play/Pause | | | | | | |
|  | Red | Rec | | | | | | |
|  | Green | Rev | | | | | | |
|  | Yellow | Play/Pause | | | | | | |
|  | Blue | Fwd | | | | | | |
|  | S.Mode | Nicam/A2 | | | | | | |
|  |  | | | | | | | |
|  | P.Mode | Aspect | | | | | | |
|  |  | | | | | | | |
| OK | OK | | | | | | | |
|  |  | | | | | | | |
| MENU | Menu | | | | | | | |
|  |  | | | | | | | |
| EXIT | Exit | | | | | | | |
| VOL+ | Vol+ | | | | | | | |
|  | Display | | | | | | | |
| CH+ | CH+ | Next | | | | | | |
| VOL- | Vol- | | | | | | | |
| MUTE | Mute | | | | | | | |
| CH- | CH- | Prev | | | | | | |
| 1 | 1 | | | | | | | |
| 2 | 2 | | | | | | | |
| 3 | 3 | | | | | | | |
| 4 | 4 | | | | | | | |
| 5 | 5 | | | | | | | |
| 6 | 6 | | | | | | | |
| 7 | 7 | | | | | | | |
| 8 | 8 | | | | | | | |
| 9 | 9 | | | | | | | |
|  | -/-- | | | | | | | |
| 0/10 | 0 | | | | | | | |
|  | Fav | | | | | | | |