

 

 









 




 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	ORION ORION-14							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Power						
AV	Source	Source						
TEXT	Text							
TV	TV/Radio							
	Subpage							
	Subtitle	Subtitle						
	T_Size							
	Prev Pr.							
	Epg							
	T_Hold	Stop						
	T_Index	Play/Pause						
	Red	Record						
	Green	Rev						
	Yellow	Play/Pause						
	Blue	Fwd						
	Audio	Audio						
	▲	▲						
	Aspect							
	◀	◀						
OK	OK	OK						
	▶	▶						
MENU	Menu	Menu						
	▼	▼						
EXIT	Exit	Exit						
VOL+	Volume+	Volume+						
	Display	Display						
CH+	CH+	Next						
VOL-	Volume-	Volume-						
MUTE	Mute	Mute						
CH-	CH-	Prev						
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	Fav							