

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	- RC1110							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Input/AV							
TEXT	Text							
TV	TV/DTV							
	T_Time							
	T_Size/Wid							
	T_Mix/PIP							
	T_Update							
	T_Reveal							
	T_Hold							
	T_Index							
	R/Sound							
	G/Picture							
	Y/Feature							
	B/Install							
	I-II							
	Guide							
OK	OK							
MENU	Menu							
EXIT	Return	Exit						
VOL+	Volume+							
	Info							
CH+	CH+							
VOL-	Volume-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	P<P							