

## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	- RC1165 TV		- RC1165 DVD					
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power		Power	Open/Close				
AV	Input							
TEXT	Text		Program					
TV	TV		Title					
	T_Subpage		Time					
	Subtitle		Subtitle					
	T_Size		Zoom					
	T_Mix		Repeat	A-B				
	T_Update							
	T_Reveal							
	T_Hold		Stop					
	T_Index		Pause					
	Red			Red				
	Green		Rev	Green				
	Yellow		Play	Yellow/Audi				
	Blue		Fwd	Blue/Angle				
	I/II		Wide					
	PP							
OK	OK		OK	OK				
MENU	Menu		DVD Menu	Menu				
EXIT	Exit		Return	Return				
VOL+	Volume+		Volume+					
	Info		Display					
CH+	Prog+		Next					
VOL-	Volume-		Volume-					
MUTE	Mute		Mute					
CH-	Prog-		Prev					
1	1	TV Mode	1					
2	2	DVD Mode	2					
3	3	DTV Mode	3					
4	4		4					
5	5		5					
6	6		6					
7	7		7					
8	8		8					
9	9		9					
	Guide		+10					
0/10	0		0					
	Prev.Pr.		Search					