




 



 
 











Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	- RC1549							
	Power							
AV	AV-Source							
TEXT	Text							
TV	TV/DTV	Fav						
	T_Time							
	Subtitle							
	T_Size/Wid							
	T_Mix							
	T_Update							
	T_Reveal							
	T_Hold							
	T_Index							
	Red							
	Green							
	Yellow							
	Blue							
	I-II	Lang						
								
	Guide/EPG	Screen						
								
OK	OK							
								
MENU	Menu	Presets						
								
EXIT	Exit/Return							
VOL+	Vol+							
	Info							
CH+	CH+							
VOL-	Vol-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	P<P/Swap							