



 


 
 
 












 
 


 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Power						
AV	Input	HDMI Cont.						
TEXT	Text	Title						
TV	TV/DTV	Root						
	Sleep							
	Subtitle	Subtitle						
	Size	Zoom						
	Pr.Prev	Repeat						
	Update							
	Reveal							
	Hold	Stop						
	Index	Pause						
	Red	Rec						
	Green	Rev						
	Yellow	Play						
	Blue	Fwd						
	Lang							
								
	Presets							
								
OK	OK	OK						
								
MENU	Menu	Menu						
								
EXIT	Return	Return						
VOL+	Volume+	Volume+						
	Info							
CH+	P+	Next						
VOL-	Volume-	Volume-						
MUTE	Mute	Mute						
CH-	P-	Prev						
1	1	C						
2	2	Search						
3	3							
4	4	Angle						
5	5	PiP						
6	6							
7	7	Screen						
8	8							
9	9							
	Guide	Csillag1						
0/10	0							
	Fav	Csillag2						