

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	- RC4876W							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power	Power						
AV	Input							
TEXT	Text							
TV	TV							
	Sleep							
	Subt							
	Pr.Prev							
		Stop						
	Media	Pause						
	Red	Rec						
	Green	Rev						
	Yellow	Play						
	Blue	Fwd						
	EQ							
	Presets							
OK	OK	OK						
MENU	Menu	Q.Menu						
EXIT	Back	Exit						
VOL+	Volume+	Volume+						
	Info							
CH+	P+	Next						
VOL-	Volume-	Volume-						
MUTE	Mute	Mute						
CH-	P-	Prev						
1	1	My1						
2	2	My2/Youtu						
3	3	3D						
4	4	Wid./Netflix						
5	5	Web						
6	6	Lang.						
7	7	Screen						
8	8							
9	9							
	Guide	*1						
0/10	0							
	Fav	*2/FPlay						