




 





 








 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1) 338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Input							
TEXT	TV/TXT							
TV	TV/TXT							
	Sleep							
	Subtitle							
	T_Size							
								
	T_Cancel							
	T_Reveal							
	T_Hold							
	T_Index							
	Red							
	Green							
	Yellow							
	Blue							
	List							
								
	Epg							
								
OK	OK							
								
MENU	Menu							
								
EXIT	Exit							
VOL+	Vol+							
	Info							
CH+	CH+							
VOL-	Vol-							
MUTE	Mute							
CH-	CH-							
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	Prev Pr.							
0/10	0							
	Fav							