

Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	JVC RM-C1232 TV		JVC RM-C1232 DVD					
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power		Power	Eject				
AV	Input		Eject					
TEXT								
TV								
			Subtitle					
	Size		Zoom					
	Pr.Prev.							
	Subpage							
	Reveal		Angle					
	Hold		Stop					
			Pause					
	Red		Rec	T-Rec				
	Green		Rev					
	Yellow		Play	Play Mode				
	Blue		Fwd					
	Audio I/II		Audio I/II					
	Pict.Size		Setup					
OK	Enter		Enter	Enter				
MENU	Menu		DVD Menu	Top Menu				
EXIT	Return	Exit	Return	Exit				
VOL+	Volume+		Volume+					
	Info		Info					
CH+	Prog+		Next					
VOL-	Volume-		Volume-					
MUTE	Mute		Mute					
CH-	Prog-		Prev					
1	1	TV Mode	1	TV Mode				
2	2	DVD Mode	2	DVD Mode				
3	3	Media	3	Media				
4	4		4					
5	5		5					
6	6		6					
7	7		7					
8	8		8					
9	9		9					
	Guide							
0/10	0		0					
	CH List							