

 

 









 



 
 
 
 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	SONY RM-EA005							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Standby							
AV	AV							
TEXT	Text							
TV	TV							
	Sleep							
								
	T_Size							
	Prev.Pr.							
	EPG							
	T_Reveal							
	T_Hold							
	Freeze							
	Red							
	Green							
	Yellow							
	Blue							
	S.Mode	A/B						
								
	P.Mode							
								
OK	OK							
								
MENU	Menu							
								
EXIT	Normal							
VOL+	Volume+							
	Display							
CH+	Prog+							
VOL-	Volume-							
MUTE	Mute							
CH-	Prog-							
1	1	Pip						
2	2	Pip Swap						
3	3	Pip Source						
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	-/--							
0/10	0							
	Prev.Pr.							