



 

 
 
 



 
 












 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	SONY RM-ED006							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Input							
TEXT	Text	Digital						
TV		Analog						
								
	Subtitle							
								
	Prev.Pr.							
		F.Rew						
	T_Reveal	F.Fwd						
	T_Hold	Stop						
	Freeze	Pause						
	Red							
	Green	Rew						
	Yellow	Play						
	Blue	Fwd						
	Audio	AD						
								
	Options	Screen						
								
OK	OK	OK						
								
MENU	Menu							
								
EXIT	Return	Exit						
VOL+	Volume+	Volume+						
	Info							
CH+	Program+	Next						
VOL-	Volume-	Volume-						
MUTE	Mute	Mute						
CH-	Program-	Prev						
1	1	Sync Menu						
2	2							
3	3							
4	4	Theatre						
5	5							
6	6	Scene						
7	7							
8	8							
9	9							
	Guide							
0/10	0							
	Fav							