




 



 
 
 





 
 


## Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 [www.taviranyitok.hu](http://www.taviranyitok.hu)

Layout Keys	TV		VCR/DVD		SAT		AUX	
	SONY RMF-TX621E							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Power							
AV	Input							
TEXT	Text	Title List						
TV	TV	Dig./Ana.						
								
	Subtitle							
								
	Prev.Pr.							
								
	T_Reveal							
	T_Hold	Stop						
		Pause						
	Red	Record						
	Green	Rew						
	Yellow	Play						
	Blue	Fwd						
	Audio							
	▲	▲						
								
	◀	◀						
OK	OK	OK						
	▶	▶						
MENU	Home							
	▼	▼						
EXIT	Return	Exit						
VOL+	Volume+	Volume+						
	Info	Help						
CH+	Program+	Next						
VOL-	Volume-	Volume-						
MUTE	Mute	Mute						
CH-	Program-	Prev						
1	1	Sync Menu						
2	2	Action						
3	3							
4	4							
5	5							
6	6	Google						
7	7	Netflix						
8	8							
9	9	Discover						
	Guide							
0/10	0							
		TV/Radio						