




 



 
 
 








 


Távírányító segédlet

Varga András Távírányító Specialista

Tel.: (06-1)-338-3160 Mobil: +36-30-756-2289 www.taviranyitok.hu

Layout Keys	TV		VCR/DVD		SAT		AUX	
	TECHNIKA XMU-RMC0032							
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	Standby	Disp.Off						
AV	Source	USB						
TEXT	Text							
TV	ATV	TV/Radio						
	Sleep							
	Subtitle							
	T_Size							
	Prev Pr.							
								
	T_Reveal							
	T_Hold	Stop						
	T_Index	Play/Pause						
	Red							
	Green	Rev						
	Yellow	Play/Pause						
	Blue	Fwd						
	S.Mode	Audio						
	▲	▲						
	P.Mode	Aspect						
	◀	◀						
OK	OK	OK						
	▶	▶						
MENU	Menu							
	▼	▼						
EXIT	Exit	Exit						
VOL+	Vol+							
	Info							
CH+	CH+	Next						
VOL-	Vol-							
MUTE	Mute							
CH-	CH-	Prev						
1	1							
2	2							
3	3							
4	4							
5	5							
6	6							
7	7							
8	8							
9	9							
	Guide							
0/10	0							
	Fav							